

Square Inset Frame

0.50
Cabinet
Factor



- ❶ **Cabinet Construction:** 3/4"Th x 1 1/2"W Square Inset face frame, 3/4" thick natural birch plywood assembled with fluted dowels.
- ❷ **Shelves:** 3/4" thick natural birch plywood edged with matching PVC edge tape, full depth, and adjustable every 32mm.
- ❸ **Drawer Boxes:** 5/8" thick solid maple dovetail material with a 1/4" thick bottom. Blum Tandem full extension under mount drawer tracks with integral soft close Blumotion.
- ❹ **Door Hinges:** Standard hinges are Blum 100° full overlay concealed clip on hinges with 6 way adjustability. Upgrades: Blum 170° concealed clip on hinges. Blum 100° concealed clip on hinges with Soft Close. Blum 170° concealed clip on hinges with Soft Close. Finial Hinges for 3/4" thick & 1" thick doors, available in various finishes.
- ❺ **Finished Ends:** All required finished ends are included at no charge for all species. Flush finished ends are standard.
- ❻ **Cabinet Back:** 1/4" thick backer with nailing strips applied between the sides at the top, bottom and wherever necessary for extra support.
- ❼ **Toe Kick:** 4 1/2"H inset plinth bases for Base, Planning Desk, Tall & Vanity Cabinets.

Single Bead Inset Frame

0.50
Cabinet
Factor



- ❶ **Cabinet Construction:** 3/4"Th x 1 1/2"W Single Bead Inset face frame, 3/4" thick natural birch plywood assembled with fluted dowels.
- ❷ **Shelves:** 3/4" thick natural birch plywood edged with matching PVC edge tape, full depth, and adjustable every 32mm.
- ❸ **Drawer Boxes:** 5/8" thick solid maple dovetail material with a 1/4" thick bottom. Blum Tandem full extension under mount drawer tracks with integral soft close Blumotion.
- ❹ **Door Hinges:** Standard hinges are Blum 100° full overlay concealed clip on hinges with 6 way adjustability. Upgrades: Blum 170° concealed clip on hinges. Blum 100° concealed clip on hinges with Soft Close. Blum 170° concealed clip on hinges with Soft Close. Finial Hinges for 3/4" thick & 1" thick doors, available in various finishes.
- ❺ **Finished Ends:** All required finished ends are included at no charge for all species. Flush finished ends are standard.
- ❻ **Cabinet Back:** 1/4" thick backer with nailing strips applied between the sides at the top, bottom and wherever necessary for extra support.
- ❼ **Toe Kick:** 4 1/2"H inset plinth bases for Base, Planning Desk, Tall & Vanity Cabinets.

Double Bead Inset Frame

0.75
Cabinet
Factor



- ❶ **Cabinet Construction:** 3/4"Th x 1 1/2"W Double Bead Inset face frame, 3/4" thick natural birch plywood assembled with fluted dowels.
- ❷ **Shelves:** 3/4" thick natural birch plywood edged with matching PVC edge tape, full depth, and adjustable every 32mm.
- ❸ **Drawer Boxes:** 5/8" thick solid maple dovetail material with a 1/4" thick bottom. Blum Tandem full extension under mount drawer tracks with integral soft close Blumotion.
- ❹ **Door Hinges:** Standard hinges are Blum 100° full overlay concealed clip on hinges with 6 way adjustability.
- ❺ **Finished Ends:** All required finished ends are included at no charge for all species. Flush finished ends are standard.
- ❻ **Cabinet Back:** 1/4" thick backer with nailing strips applied between the sides at the top, bottom and wherever necessary for extra support.
- ❼ **Toe Kick:** 4 1/2"H inset plinth bases for Base, Planning Desk, Tall & Vanity Cabinets.



elmwood


fine custom cabinetry

elmwoodkitchens.com/ops June 15, 2010


Cabinet Construction Guide

Full Access Frameless

- All Wood
- Wood Print
- White

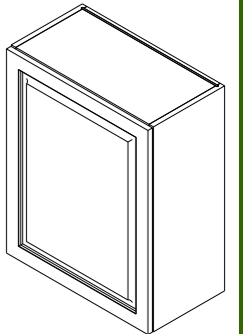


Full Overlay Frame

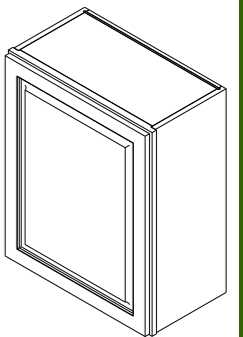

Inset Frame

- Square
- Single Bead
- Double Bead

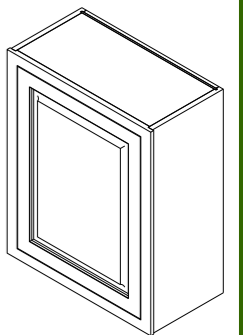

Full Access Frameless All Wood

0.30
Cabinet
Factor



- ❶ **Cabinet Construction:** 3/4" thick natural birch plywood assembled with fluted dowels.
- ❷ **Shelves:** 3/4" thick natural birch plywood edged with matching PVC edge tape, full depth, and adjustable every 32mm.
- ❸ **Drawer Boxes:** 5/8" thick solid maple dovetail material with a 1/4" thick bottom. Blum Tandem full extension under mount drawer tracks with integral soft close Blumotion. Upgrade: Stainless steel Blum Tandem box with stainless steel laminate bottom with full extension soft close tracks.
- ❹ **Door Hinges:** Standard: Blum 107° concealed clip on hinges. Upgrade: Blum 170° concealed clip on hinges & soft close Blumotion for both hinge types.
- ❺ **Finished Ends:** All required finished ends are included at no charge for all species.
- ❻ **Cabinet Back:** 1/4" thick backer with nailing strips applied between the sides at the top, bottom and wherever necessary for extra support.
- ❼ **Cabinet Edges:** Cabinet edges (sides, top and floor) are finished with matching PVC edge tape, matching stained or painted veneer edges are available as an up-grade.
- ❽ **Toe Kick:** 4 1/2"H inset plinth bases for Base, Planning Desk, Tall & Vanity Cabinets.

Full Access Frameless Wood Print

0.20
Cabinet
Factor



- ❶ **Cabinet Construction:** 3/4" thick Classic Maple melamine assembled with fluted dowels.
- ❷ **Shelves:** 3/4" thick Classic Maple melamine edged with matching PVC edge tape, full depth, and adjustable every 32mm.
- ❸ **Drawer Boxes:** 5/8" thick solid maple dovetail material with a 1/4" thick bottom. Blum Tandem full extension under mount drawer tracks with integral soft close Blumotion. Upgrade: Stainless steel Blum Tandem box with stainless steel laminate bottom with full extension soft close tracks.
- ❹ **Door Hinges:** Standard: Blum 107° concealed clip on hinges. Upgrade: Blum 170° concealed clip on hinges & soft close Blumotion for both hinge types.
- ❺ **Finished Ends:** All required finished ends are included at no charge for all species.
- ❻ **Cabinet Back:** 1/8" thick backer with nailing strips applied between the sides at the top, bottom and wherever necessary for extra support.
- ❼ **Cabinet Edges:** Cabinet edges (sides, top and floor) are finished with matching PVC edge tape, matching stained or painted veneer edges are available as an up-grade.
- ❽ **Toe Kick:** 4 1/2"H inset plinth bases for Base, Planning Desk, Tall & Vanity Cabinets.

Full Access Frameless White

0.10
Cabinet
Factor



- ❶ **Cabinet Construction:** 3/4" thick white melamine assembled with fluted dowels.
- ❷ **Shelves:** 3/4" thick white melamine, edged with matching PVC edge tape, full depth, and adjustable every 32mm.
- ❸ **Drawer Boxes:** White epoxy coated Blum Tandem box with a 5/8" thick bottom with full extension under mount drawer tracks with Integral Soft Close Blumotion. Upgrade: Stainless steel Blum Tandem box with stainless steel laminate bottom with full extension soft close tracks & dovetail maple with full extension soft close tracks.
- ❹ **Door Hinges:** Standard: Blum 107° concealed clip on hinges. Upgrade: Blum 170° concealed clip on hinges & soft close Blumotion for both hinge types.
- ❺ **Finished Ends:** All required finished ends are included at no charge for all species.
- ❻ **Cabinet Back:** 1/8" thick backer with nailing strips applied between the sides at the top, bottom and wherever necessary for extra support.
- ❼ **Cabinet Edges:** Cabinet edges (sides, top and floor) are finished with matching PVC edge tape, matching stained or painted veneer edges are available as an up-grade.
- ❽ **Toe Kick:** 4 1/2"H inset plinth bases for Base, Planning Desk, Tall & Vanity Cabinets.

Full Overlay Frame

0.45
Cabinet
Factor



- ❶ **Cabinet Construction:** 3/4"Th x 1 1/2"W face frame with 1 1/4" overlay, 3/4" thick natural birch plywood assembled with fluted dowels.
- ❷ **Shelves:** 3/4" thick natural birch plywood edged with matching PVC edge tape, full depth, and adjustable every 32mm.
- ❸ **Drawer Boxes:** 5/8" thick solid maple dovetail material with a 1/4" thick bottom. Blum Tandem full extension under mount drawer tracks with integral soft close Blumotion.
- ❹ **Door Hinges:** Blum compact wrap around 110° full overlay hinge with 3 way adjustability. Soft-close Blumotion is standard.
- ❺ **Finished Ends:** All required finished ends are included at no charge for all species. Flush finished ends are available as an up-charge.
- ❻ **Cabinet Back:** 1/4" thick backer with nailing strips applied between the sides at the top, bottom and wherever necessary for extra support.
- ❽ **Toe Kick:** 4 1/2"H inset plinth bases for Base, Planning Desk, Tall & Vanity Cabinets.